

ENCODING THE RIDE REMOTE

Step 1: Check that the remote is not locked or turned off.

Step 2: Unplug the Ride Core module if it is currently installed. To disconnect the device without triggering the back-up battery, unplug the main harness within 5 seconds of turning on the motorcycle's ignition.

Turn on the ignition switch.

Unplug the main harness within 5 seconds.

Verify no lights appear on the RIDE Core module.

If you do see lights on the module, try Step 2 again

Step 3: This step is time sensitive. Read all steps before continuing.

Turn off ignition if still on. Plug the Ride Core module into the installation harness.

After 5 seconds, the white light will start to flash slowly.

Once you see the white light start to flash slowly, turn the ignition on and off three (3) times quickly within 6 seconds.


Step 4: If performed correctly and in the time allotted, the white light will flash twice every 10 seconds to indicate programming mode.

Press button 1 on the remote and hold for 5 seconds.

When the button is released, the remote will chirp four (4) times and the screen will display [LErn donE].

If encoding a second remote, press button 1 for 5 seconds on the second remote now.

To complete the process and exit programming mode, turn the ignition on/off. The remote will sound one long chirp and the siren will chirp twice.

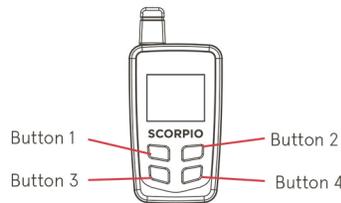

Turning the Transceiver On/Off

To turn "off", press button #4 for 4 seconds. The Transceiver will beep two times to indicate that the unit has been turned "off".

To turn "on", press button #4 for 4 seconds. The Transceiver will beep two times to indicate that the unit is turned back "on".

Locking the Transceiver's buttons

To "lock", press button #4 for 2 sec. The Transceiver will beep and buttons will lock

To "unlock", press button #4 for 2 sec. The Transceiver will beep and buttons will unlock.