

# RIDE

SmartLINK

## QUICK START GUIDE

Powered by SCORPIO




View the "SmartLINK at a Glance" video by visiting: [ridescorpio.com/smartlink](http://ridescorpio.com/smartlink).

The vehicle must be equipped with a Harley-Davidson® Factory Security System before this kit can be installed.

For a more detailed User Manual, please visit: [ridescorpio.com/help](http://ridescorpio.com/help)

## COMPONENTS

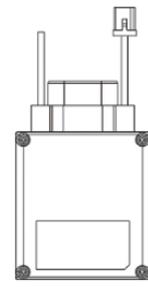


Core



Harness



Hook & Loop / Cable-ties

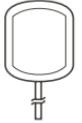

GPS Antenna

### STEP 1: LOCATE SIREN CONNECTOR


Locate the siren connector from your factory security system.

Turn on ignition with fob in range to disarm security system and unplug factory siren (if installed).

For detailed siren connector locations, please refer to the factory siren installation instructions for your specific model.

### STEP 2: INSTALL SMARTLINK HARNESS


Plug the female end of the SmartLINK Harness into the siren connector from the factory security system.

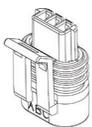

Plug the factory siren (if installed) into the 3 position male connector from the SmartLINK Harness.


### STEP 2: CONTINUED

Route the 5 position male connector from the SmartLINK Harness to desired mounting location (see Tech Tips for mounting suggestions).

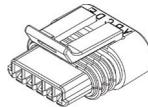


### STEP 3: ATTACH GPS

Attach the GPS antenna to the main module. Secure the GPS antenna in a safe location where it is not blocked by metal and pointed toward the sky. The antenna is magnetic, but also secure it with the included hook & loop/cable ties.

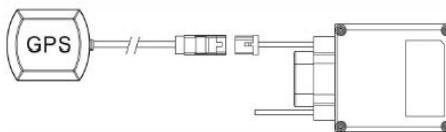

### STEP 4: PLUG IN SMARTLINK MODULE

Plug the installation harness into the main module. Secure the module with the included hook & loop/cable ties.

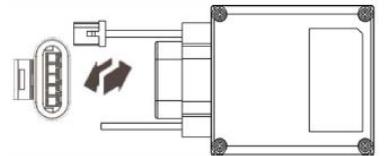

Turn the ignition switch to the "off" position once the installation is complete. Confirm that the red light on the module is now blinking.

### NOTIFICATION NOTICE

Currently, the factory security system standard of an alarm alert is "Short Alarm" & "Full Alarm". At the time of this writing, alerts received will show up as "Shock" and "Tilt" respectively. This will be addressed in future versions of the app via updates.

**APPLICATION NOTICE** Currently, the Ride Application is set up for use with our Ride and rLiNK Systems, in addition to the SmartLINK. You will be exposed to app features which will not be compatible with the SmartLINK. Future app updates will address these features.

**Early Alert/Arm:** The SmartLINK will arm/disarm with your factory security system key fob.

**Transport Mode :** Refer to the factory security system manual for information on how to get your bike into transportation mode.

**Perimeter Sensor, Siren, TPM :** These accessories are not compatible with SmartLINK.

### TECH TIPS

SmartLINK has an internal cellular and external GPS antenna. Do not mount in a location where the unit will be completely blocked by metal (such as under the fuel tank). Ideal locations are under the seat or in the tail section.

SmartLINK includes a back-up battery to protect your bike in case of theft. The back-up battery will power the device when disconnected from power. To disconnect the device without triggering the battery, unplug the device within 5 seconds of turning on ignition.

#### Need More Help?

Visit our online support:  
[www.ridescorpio.com/help](http://www.ridescorpio.com/help)  
[help@ridescorpio.com](mailto:help@ridescorpio.com)  
 or call our Technical Support:  
 US: 1 800 428 0440  
 INT: +1 480 951 1109  
 Mon-Fri, 8 a.m. to 5 p.m. MST



Download the app and sign up for an account. Then, scan your IMEI and activate your subscription account.



Ready to ride.  
 Log on with the app and Rider Dash at [ridescorpio.com/dash](http://ridescorpio.com/dash).

For a more detailed User Manual, please visit [ridescorpio.com/help](http://ridescorpio.com/help)