

www.scorpioalarms.com
support@aritrnix.com

Phone
(480)951-1109

Aritronix Ltd
16055 N. Dial Blvd. Suite B-10
Scottsdale, AZ 85260

SCORPIO
/MOTOSECURE/

SR-i900 Series

V9.3



Important Information

Save this information for future use.

Date of purchase ____/____/____

Place of purchase _____

Invoice/Receipt # _____

Model Number _____

Production Code _____

Notes:

FCC Notice

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

FCC ID:
TRS-9 ARIMKF50
MCM-9 ARIMKF51

SPECIAL NOTE ON RANGE

The average reception range is approximately ½ mile (800 meters). The actual reception range could be greater or less depending on the location and/or the presence of obstacles between the vehicle and the receiver. The reception range can also be affected by the presence of strong electromagnetic interference from outside sources.



Installation

User's Guide

Transceiver Information

Optional Accessories

Appendix

Table of Contents

Installation

Component List	3
Planning the Installation	3
Installation Diagram	4
Installation Warnings and Notes	5
Mounting the Components	5
Routing the Antenna Wire	5
Making Connections	5
Color Code Chart	6
Using the T-tap Connectors	6

User's Guide

Remote Transceiver Icons and Message Display	7
Transceiver Charging Instructions	7
Transceiver Battery Status	7
Motorcycle Battery Status	7
Transceiver Back Light	7
Operating Instructions	8
Auto Arm	8
Activate Perimeter Sensor	8

Panic / Stop Trigger	8
Auto Disarm	8
Manual Disarm	8
Manual Arm	8
Programming and Customizing Instructions	9
Entering Programming mode	9
Selecting Perimeter Sensor Default	9
Selecting Transceiver Alert Type	10
Adjusting the Accelerometer	10
Selecting Siren Default	11
Setting the Clock	11
Encoding the Transceiver	12

Additional Information

Sensor Memory display	13
Motorcycle battery safeguard	13

Limited Warranty

Limited Warranty

Products manufactured by Aritronix, Ltd are warranted by the company to the original consumer purchaser to be free from defects in workmanship and materials. Should a product be found defective Aritronix shall repair or replace the product or any part of the product which Aritronix agrees is defective without charge during the first 12 months from the date of original purchase provided that the product is returned to Aritronix freight prepaid and accompanied by a copy of the purchase receipt.

This warranty does not apply to any product damaged by accident, physical or electrical misuse or abuse, improper installation, alteration, any use contrary to its intended function, fire, flood, unauthorized repair or any other acts of God.

Aritronix shall not be responsible for removal and/or reinstallation charges or theft of the motorcycle or its contents or any incidental or consequential damages caused by any failure of the product to function properly. Under no circumstances should this warranty or the product covered by warranty be construed as an insurance policy against loss or damage of any kind.

Aritronix neither assumes nor authorizes any person or organization to make any warranties or assume any liability in connection with the sale, installation, or use of this product.

This completes Aritronix warranty and no other warranty exists.

What should you do if you experience a problem with a Scorpio product?

First contact Aritronix, Ltd [**Proof of purchase, installer and motorcycle information will be requested**]. If after assistance from our trained staff it is determined that the Aritronix product may be faulty then you will be provided with detailed information on processing a warranty claim and instructions on how to send the product into our repair office. All warranty claims must contain a return material authorization (RMA). Aritronix will not accept any package that has not been approved for warranty repair/exchange and an issued RMA. **Shipping charges may apply.**

Troubleshooting guide

Problem	Possible Cause	Solution
Will not arm	RFID antenna not connected	Verify connection from MCM to RFID antenna
	Power or ground not connected	Verify connection to power lead and ground connection
	Orange wire not connected	Verify connection to 12 volt wire with key on. (tail light on most bikes)
Turn signals will not flash	Grey wires from GEN-1 not connected or connected to wrong wires	Test wires and change connections to correct wires
Perimeter Sensor not working	Sensor not connected	Check connections
	System set on default with sensor off	Enter Programming mode and change default
Ignition Disable does not work	Orange wire from GEN-1 not connected	Connect orange wire from GEN-1 to 12 volt (+) with ignition key on. In most bikes that is the tail light wire
	Ignition disable not connected to correct wire on bike	Refer to options on the ignition disable instruction page. Test selected wire before reconnecting RID-5 wires.

Manual Override Procedure

Programming Personal Override Code	14
Enter Programming Mode	14
Select number of flashes for Code	14
Using Code in case of lost remote	14

Transceiver Information

Alarm Triggers	15
Range Confirmation Signal	16
Checking Violation Display	16
Transceiver Battery Information	17
Low Battery Stages	17

Optional Accessory Instructions


Perimeter Sensor (SN 5)	19
Back up Battery (BAT-5)	20
Ignition Disable / Anti hijack Unit	21-22

Appendix

Troubleshooting guide	a1
Limited Warranty	a2
Important Information / Notes	a3
FCC Information	a3
Special Note	a3

Installation

Components

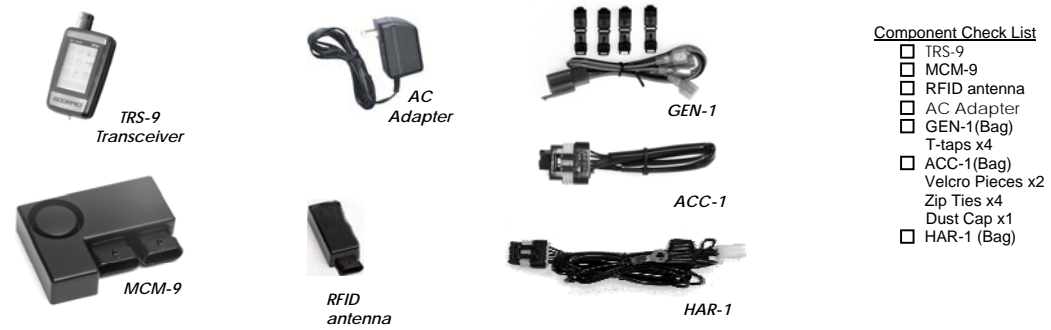


Planning the Installation


- Check that your motorcycle battery is fully charged.
- Check the layout of the motorcycle for placement of components.
- Verify that no moving parts interfere with the components or their wires.
- Verify that chosen location is not near extreme heat.

Appendix


----- Installation Diagram -----

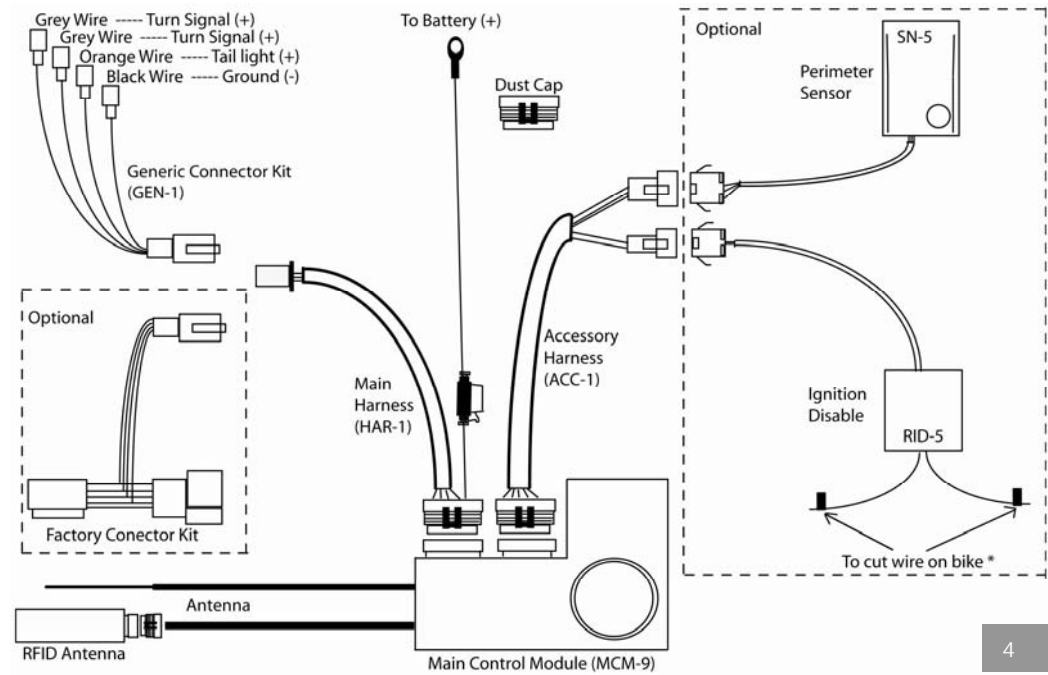

Installation Warnings and Notes

 : Connect the (HAR-1) harness to the MCM only after installation is completed. Make sure remote is close to the bike to avoid a trigger.

Note: When the main harness (HAR-1) is plugged in, the siren should chirp. If the siren does not chirp; check the alarm inline fuse, connection to battery (+), and connection to ground (-).

 : If the battery is to be removed, disconnect HAR-1 connector first. Reconnect only after battery terminals are reconnected.

Mounting the Components


Select a suitable location underneath the seat or in a side cover. Mount components using velcro or cable ties. Make sure that the components are not exposed or accessible.

- o Place MCM as flat as possible to achieve best performance.
- o Place RFID antenna under seat or tail section, do not chose a location that is covered with metal.

Routing the Antenna Wire

For best performance the last 6" of the antenna should:

- o Be as vertical as possible.
- o Be away from metal as much as possible.



Making Connections


The necessary connector or wires are found under the seat or in the tail section of the bike. Removal of the tail section plastics or side cover might be necessary.

Ignition / Engine Control Wire Options:

- Option #1: Positive lead wire on fuel pump
- Option #2: Positive lead wire on fuel injection system
- Option #3: Positive wire that goes to the ignition fuse in fuse box. This should be either a 10 or 15 amp fuse labeled **IGN**. (Carbureted Bikes Only)
- Option #4: Ground wire from ignition module
- Option #5: Positive wire from ignition module to ignition coil

Operating the Anti-Hijack Feature

While the engine is running, press and hold the transceiver's **button 1** and **button 2** at the same time for 3 seconds. The siren will begin to chirp confirming that the Anti-Hijack feature has been activated. 15 seconds later, the siren will go off continuously, and the engine will shut down. To disarm, turn off the ignition switch and press button 2.

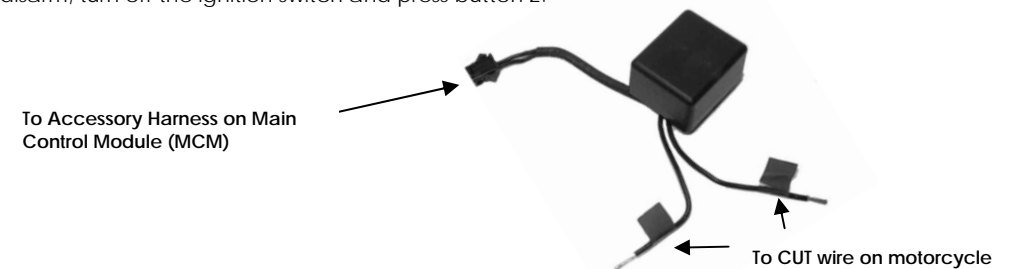

Ignition Disable / Anti-hijack Module (RID-5)

Installation

1. Cut the Ignition / Engine control wire (refer to options on page 22)
2. Attempt to start bike to test if correct wire is selected. If bike starts the wrong wire is selected. (contact Aritrionix for assistance) If bike does not start, correct wire was selected continue to step 3.
3. When packaged the RID-5 wire ends have been treated with clear silicon to protect the ends from fraying. Make sure they are stripped bare of this before continuing.
4. Connect one end of the cut wire to one of the blue tabbed wires in RID-5 with provided butt connector or any other solid connection option.
5. Connect second end of the cut wire to second blue tabbed wire in RID-5 with provided butt connector or any other solid connection option.
6. Test connections to insure that they are as solid as possible. *
7. Plug the RID-5 connector into the matching connector on the Accessory Harness.
8. Test RID-5 by activating alarm (without perimeter sensor) and try to start bike. If bike starts, please contact Aritrionix for assistance.

* Failure to test for a loose wire could cause an accidental engine cut off.


----- Skip this page if using Factory Connector Kit -----

Color Codes: (Color codes are not always valid. Always verify before making connections)

	Ground (-)	Tail Light	Left Turn Signal	Right Turn Signal
Honda	Green	Brown	Orange	Blue
Kawasaki	Black	Red	Green	Grey
Suzuki	Black/White	Brown	Green or Black	Grey
Yamaha	Black	Blue	Green	Brown
Harley Davidson	Black	Blue	Brown	Purple
Ducati	Black	Yellow	White/Black	White/Green

Using the T-tap Connectors and GEN-1 Connector

- 1) Place the female T-tap connector over wire, close and squeeze until it snaps.
- 2) Slip male T-tap connector over hinged end of the female connector to make a connection.

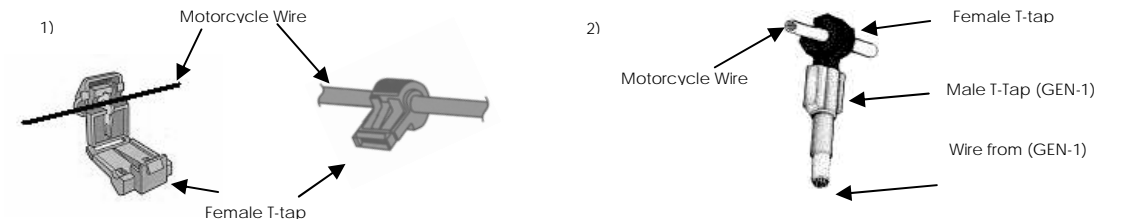



User's Guide




Charging Instructions

We recommend that the transceiver be charged for up to 12 hours to ensure full life of the battery.

1. Plug in provided charger into the transceiver.
2. While the transceiver is charging, the  icon will scroll from empty to full.
3. When the transceiver is fully charged, the  icon will no longer scroll.

It is recommended to recharge the transceiver every day to maintain full function.

Remote Battery Status

The LCD will display 3 different  icons to show the transceiver battery status.

Motorcycle Battery Status

Every time the alarm is activated or deactivated, the LCD will display a text message with the current battery voltage.


bAtt: 12.4

If motorcycle battery drops below 11 volts, the screen will display CyCLE bAtt LO.

Transceiver Back light

From the main screen, press button 1 or 2, the screen's back light will turn on for 2 seconds.

Back-up Battery (BAT-5)

The back-up battery provides the system the ability to transmit information and activate the siren when power is interrupted. If power is ever interrupted while the system is activated the back-up battery will be engaged. The transceiver will receive a  trigger and the siren will sound in 30 second increments. If power is not restored the alarm will continue to transmit and sound for six cycles.

Note: The system has to be correctly installed for at least 12 hours before full function of the back-up battery can be used.

To check the status of the back-up battery, activate the system using button 1.

- If the system chirps 3 times the back-up battery is in good working condition
- If the system chirps 2 times the back-up battery is not fully charged or not installed.

Note: If power is purposely being interrupted when the alarm is activated, turn ignition key on and off before disconnecting power to limit the back-up to two cycles instead of six.

Note: If the system chirps only 2 times and it has been correctly connected for more the 12 hours, the battery needs replacement. (Contact Arironix for replacement options)

Perimeter Sensor (SN-5)

Mounting the SN-5

The Perimeter sensor uses high frequency microwave technology to detect mass density movement around the motorcycle. The signal can transmit through the seat, fiberglass, leather and plastic, but not metal. It is recommended to place this sensor under the seat as close as possible to the center of the motorcycle. With the provided Velcro, you can mount this sensor on top of the battery or any flat surface, making sure that the top side of the sensor is facing upwards. Place the perimeter sensor as faraway from the MCM as possible.

Adjusting the Sensor

Although the sensor is pre set from the factory it may be necessary to adjust the sensitivity to suit your needs. Remove the plastic cap and turn the adjustment screw.

To increase sensitivity, turn adjustment screw clockwise.

To decrease sensitivity, turn the adjustment screw counter clockwise.

Plastic Cap:
Remove to adjust
sensitivity



To Accessory Harness on Main
Control Module (MCM)


Note: Do not turn sensitivity above half way. Doing so may cause false alarms.

Operating Instructions

The SR-i900 by default, will be in auto arm mode and will activate with the perimeter sensor off and the siren on, five seconds after turning the ignition key off.

Auto Arm

Turn ignition key off. Walk away from bike

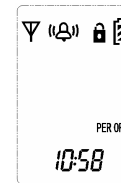

Siren:
Chirp 3 Times

Turn Signals:
Flash 1 Time

Auto Disarm

Walk next to bike. Turn ignition key on




Siren:
Chirp 1 Time

Turn Signals:
Flash 1 Time

Manual Disarm

Press and hold button 2



Siren:
Chirp 1 Time

Turn Signals:
Flash 1 Time

Note: If the system is manually disarmed, it will stay in disarmed mode. In this mode, the system will not auto arm upon turning ignition key off. To re-enable the Auto Arm feature, hold button 1.

Activate Perimeter Sensor

Press and hold button 1 and 2



Siren:
Chirp 4 Times

Turn Signals:
Flash 1 Time

Panic / Stop Trigger (when system is armed)

Press and hold button 1




Siren:
Chirp 6 Times

Turn Signals:
Flash 1 Time

Manual Arm (system has to be manually disarmed first)

Press and hold button 1

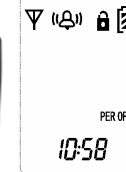


Siren:
Chirp 3 Times

Turn Signals:
Flash 1 Time


Programming and Customizing Instructions

Entering Programming Mode


1) Press button 2 twice quickly to enter programming mode



2) Press button 2 again to scroll through programmable options



3) Press button 1 to select icon and to begin programming




Programmable options will be displayed. The selected icon will flash


Note: Remote will time-out of programming mode after 20 seconds of inactivity. No changes will be saved.

Note: To exit programming mode, scroll through all icons once.

Selecting Perimeter Sensor Default

Enter programming mode. The  icon will begin to flash, press button 1 to enter the perimeter sensor menu. The LCD will display the current setting. To program, follow these steps:

Press button 1 to cycle between the options

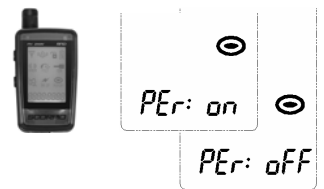

Press button 2 to save and exit

PER: on – Perimeter sensor will be **enabled** every time alarm is armed

PER: off – Perimeter sensor will be **disabled** every time alarm is armed

Optional Accessories:


Perimeter Sensor (SN-5)
 Back-up Battery (BAT-5)
 Ignition Disable (RID-5)

Transceiver Battery Information

The receiver consists of two functions RFID functions and Two-way FM communication.

Low Battery Stages


It's recommended that the transceiver be charged daily. If the transceiver is not charged daily the following stages will occur.


Low Battery: When the battery is low the  icon will cycle from 3 bars to 2 bars to 1 bar. The transceiver should be charged as soon as possible.

Two-Way Off: If the transceiver is not charged, at some point (approximately 7 days) Two-way communication will shut off. At this mode the LCD displays **[rFid onLy]**. The RFID system will still operate and you will still be able to automatically and manually arm and disarm the system.


No Response: If the battery is not recharged and all power is drained. The transceiver will not respond. The transceiver has to be charged before it can operate the system again.


Selecting Transceiver Alert Type (Audible/Silent/Vibrate)

Enter programming mode. Scroll to the  icon, press button 1 to select. The LCD will display the current settings. To program, follow these steps:

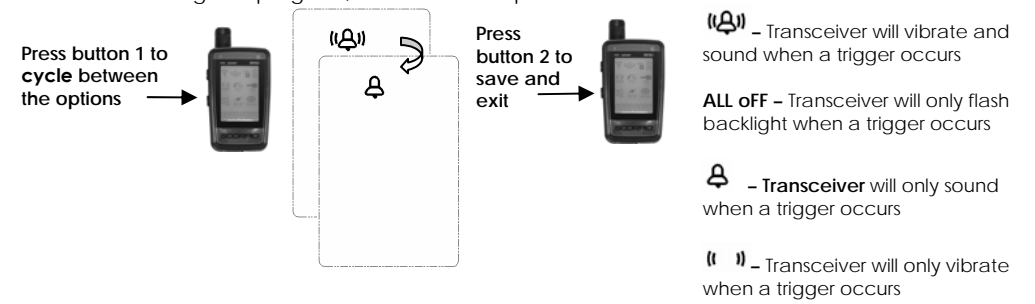



Adjusting the Accelerometer (Shock/Tilt) Sensor (proximity to MCM required)

Enter the programming mode. Scroll to the  icon and press button 1 to select. The screen will display the current sensitivity setting, and the siren will chirp 1-5 times to confirm sensitivity level. To program, follow these steps:

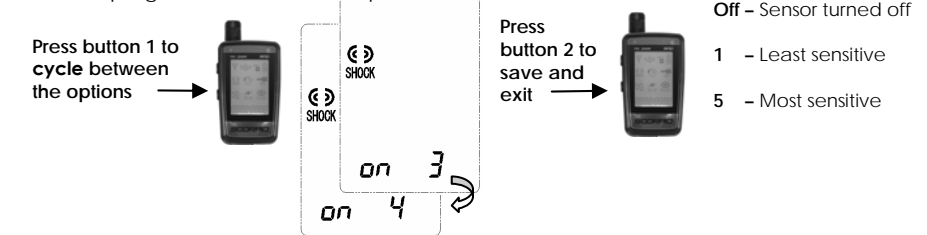


Selecting Siren Default

Enter programming mode. Scroll to the  icon and press button 1 to enter the siren menu. The LCD will display the current setting. To program, follow these steps:

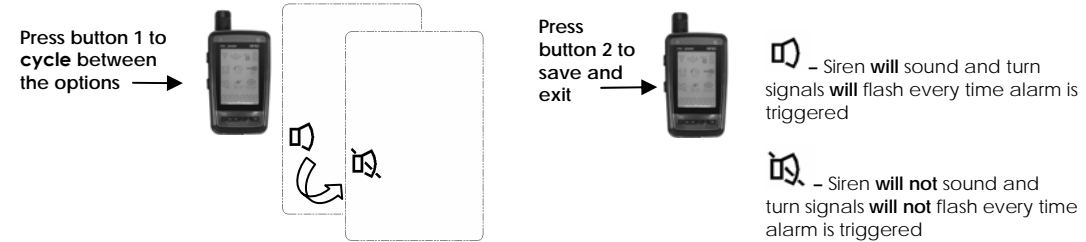



Setting the Clock

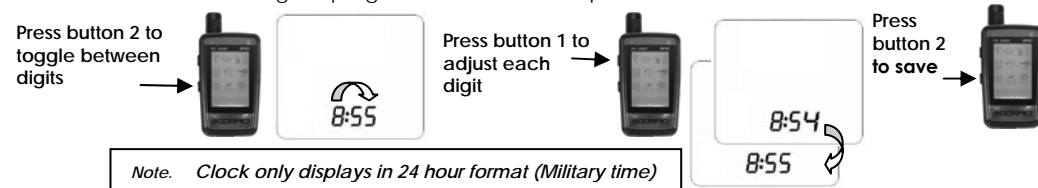Enter the programming mode. Scroll to the time and press button 1 to select. The screen will display time with the hour flashing. To program, follow these steps:



RCS (Range Confirmation Signal)

If the transceiver is within range of the MCM and the alarm is activated, the LCD will display  icon. If the transceiver does not receive the RCS; the  icon will not appear.

Checking Violation Display with Time Stamp

